

# DS600 Electronic Bluetooth Enabled Personal Scale

# Instructions for Use

**WARNING:** To prevent slipping, do not place scale on a wet surface or use while wet.

#### **SPECIFICATIONS**

- High precision strain gauge sensors
- Capacity: 11-400 lb (5-180 kg)
- Division: 0.2 lb (0.1 kg)
- Auto step on/Auto off
- Low battery/Overload indications
- Unit: lb / kg / st
- Power: 4xAA batteries (not included)
- Working temperature: 50-104°F
- Large Scale platform (12 <sup>3</sup>/<sub>4</sub>" x 12 <sup>3</sup>/<sub>4</sub>")
- Bluetooth 4.0

# OPERATION

- 1. Place the scale on a hard, flat surface. Do not use on carpet or other soft surfaces.
- 2. Stand on the scale and it will automatically measure your weight.
- 3. Stand still. The scale will flash your weight and automatically transmit it to your Bluetooth 4.0 device.
- 4. The scale will automatically turn off after 8 seconds of inactivity.



#### TO CONVERT WEIGHT UNIT

1. Press the "Unit" button on the back side of the scale.

#### ERROR MESSAGES

- 1. "EEEE" indicates that the scale is overloaded. Step off scale immediately to avoid damaging the scale.
- 2. "Lo" indicates that the batteries are low. Replace the batteries as soon as possible.

# ADVISE FOR USE & CARE

- 1. The glass platform will be slippery when it is wet. Keep it dry!
- 2. Stand still during the course of weighing.
- 3. DO NOT strike, shock or drop the scale.
- 4. Treat the scale with care as it is a precise instrument.
- 5. Clean the scale with a damp cloth and avoid water getting inside the scale. DO NOT use chemical/abrasive cleaning agents.
- 6. Keep the scale in a cool place with dry air.
- 7. Always keep your scale in a horizontal position.
- If the scale fails to turn on, check whether the batteries are installed or battery power is low. Insert or replace the batteries.
- 9. If there is an error on the display or the scale does not shut off after a long period of time, remove the batteries for 3 seconds and reinstall.
- 10. The scale is intended to weigh people. Do not weigh other items on the scale.

# ERROR RANGES

100lb: +/0.6lb 200lb: +/-0.8lb 300lb: +/-1.0lb