 


■ “ZERO” FUNCTION

 
To weigh different loads consecutively without removing loads from the scale. Put first Load on the scale, get weight reading. Press **⏻/ZERO** button to reset the LCD reading to "0" before adding next load. You can repeat this operation.

"ZERO" function

LCD will show ---- or Og each time **⏻/ZERO** is pressed. ---- means not stable, please wait for a moment. Og and meanwhile an icon on the left side of LCD mean ZERO function is activated.

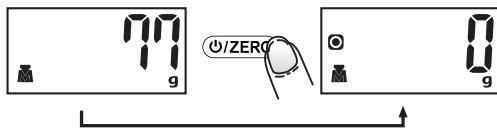

■ WARNING INDICATORS

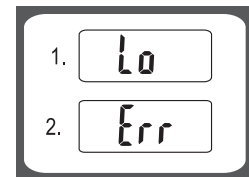

1. Replace new battery.
2. Scale overload. Remove item to avoid damage. Max. weight capacity is indicated on the scale.

5

⚠️ CLEANING AND CARE

1. Clean the scale with a slightly damp cloth. DO NOT immerse the scale in water or use chemical / abrasive cleaning agents.
2. All plastic parts should be cleaned immediately after contact with fats, spices, vinegar and strongly flavored / colored foods. Avoid contact with acids citrus juices.
3. Always use the scale on a hard, flat surface. DO NOT use on carpet.
4. DO NOT strike, shake or drop the scale.
5. The scale is high precision device. Please take care of it.
6. Please keep it dry.
7. Please check whether battery is installed or in high level if scale can not be turned on.
8. The scale is for family use only, not for commercial purpose.

6

doran®

ELECTRONIC KITCHEN SCALES

INSTRUCTIONS FOR USE

Model: PC100

Doran Scales, Inc.
883 Enterprise Ct., St. Charles, IL
www.doranscales.com

■ FEATURES

1. Three weight units lb, oz, g convertible
2. Low battery power / Overload indication
3. With high precision strain gauge sensor
4. With zero function
5. Auto off

■ BUTTONS ILLUSTRATION

UNIT Unit conversion

⏻/ZERO Turn on / Turn off / Zero

 
Button display differs from one to another, so the above picture is indicative only.

■ TO INSTALL OR REPLACE BATTERY

The battery type of scale depends on the product structure. Find the battery type of your scale according to the following pictures, then install and replace battery as described.

2x1.5V AAA batteries (included). Remove package foil before use.

1

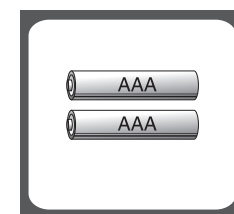

Open the battery case cover at the bottom of scale:

 
- A. Take out used batteries, with the aid of a sharp object if needed.
- B. Install new batteries by putting one side of the battery down first and pressing down the other side. (Please observe the polarity)

■ LCD




LCD display differs from one to another, so the above picture is indicative only.

■ TO CONVERT WEIGHT UNIT

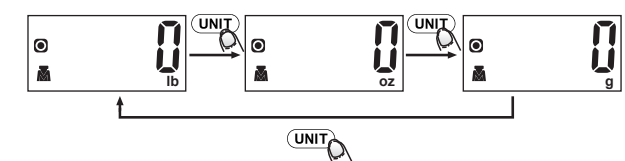


2

 ■ AUTO SHUT OFF

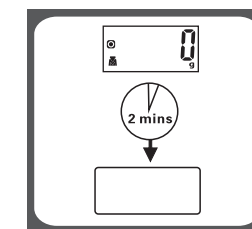

Auto shut-off occurs if display shows '0' or shows the same weight reading for about 2 minutes.

 
■ MANUAL SHUT OFF

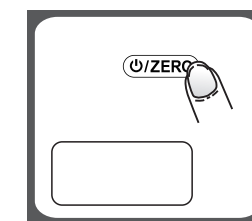

To maximize battery life, always press **⏻/ZERO** for about 3 seconds to turn off the scale after using.

3

 ■ TO START WEIGHING

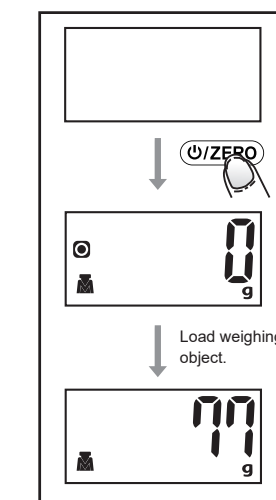

1. Weighing mode

- A. Place the scale on a solid and flat surface.
- B. Place bowl (if used) on the scale.
- C. Press **⏻/ZERO** to turn on the scale.
- D. Wait until LCD shows "0" to start weighing. Press **UNIT** to convert to weight unit if needed.
- E. Load weighing object on to start weighing. LCD will show the weight reading.

4